Assembly instructions Replacement hinge for Artemide Tolomeo lamps

Illustrated step-by-step guide for mounting the Tolomeo Joint





+49 (0) 2306 - 759 58 45 by fax



www.light11.eu service@light11.eu inform and order around the clock

Artemide

Required tools





Required tools:

- large wrench (plumber wrench, water pump pliers)
- hammer
- penetrating oil, weapon oil or silicon spray
- small screwdriver (slot)
- large screwdriver (slot)

Required spare:

• Artemide Tolomeo Replacement Hinge No 14

Please note that the repairs described here are carried out at your own risk. In the case of any damage to the luminaire in the course of a non-expert repair, we assume no warranty. Due to the use of tools and the possibility of splintering metal parts, we feel obliged to warn you about the risk of injury.

Service

We are here for you!



+49 (0) 2306-759 58 0

by telephone, Mon - Fri from 10 am to 6.30 pm, Sat from 10 am to 4 pm



+49 (0) 2306 - 759 58 45 by fax




www.light11.eu service@light11.eu inform and order around the clock

Instructions







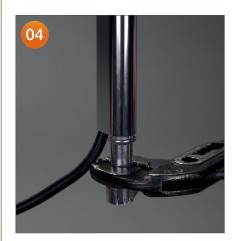


- Disconnect the luminaire from the mains by pulling the plug from the power outlet.
- 2. First, carefully remove the plastic cover on the broken joint and pull it over the supply line (pictures 02-03).
- 3. Now, a lubricant, ideally a thin oil, such as penetrating oil should be applied onto the joint. Wait for the lubricant to spread and take effect. Depending on the lubricant, this might take a few moments. Please note the manufacturer's instructions.
- 4. Once the lubricant takes effect, the broken and stuck joint can be loosened by means of suitable tools (pliers and hammer) and if possible by two people. We recommend protecting the remaining parts of the luminaire against damage by appropriate padding (cloth/foil). In order to remove the broken joint, one person should hold the luminaire's lower arm. Then, the other person has to grip the broken joint with a pair of water pump pliers (or a similar tool) and hit down on the pliers with a hammer parallel to the lamp arm to drive the broken piece out of the aluminium arm. Hitting from different angles prevents the joint from tilting inside the aluminium arm. Depending on the age of the lamp and the staining inside the lamp arm, removing the broken joint requires a different amount of hits. Therefore, some patience is needed in removing the joint (pictures 04-07).



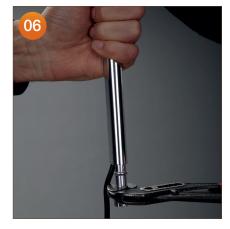


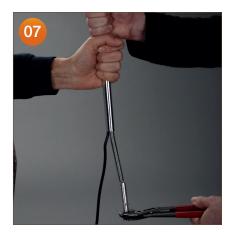



 



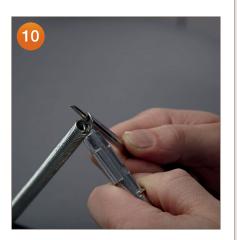







- 6. Now, you can attach the new joint to the spring. To do so, press the loop at the end of the spring onto the end piece of the joint (pictures 11-13).
- 7. Then insert the spring, including the new joint, into the lamp arm (pictures 14-15)






8. In order to fix the new joint inside the lamp arm, a large screwdriver, a hammer and some force is required. The large screwdriver is placed on the bridge between the two rings at the end of the joint. Now carefully hit the end of the screwdriver with a hammer to drive the joint into the aluminium lamp arm. Here as well, you should work with a partner (pictures 16-17).





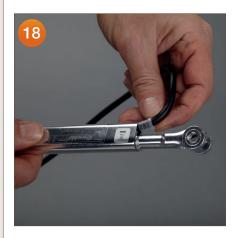

- 9. Now place the previously removed plastic cover back into the cable feed (picture 18).
- 10. The next step is to reconnect the new joint to the lower lever. For this, you have to screw the new joint and the angled joint, which later connects the lamp arm to the base, together. Make sure that the holes and rings are congruent to each other. The two washers need to be positioned congruently between the two joints. This might require some patience and sensitive fingers. Now guide the slotted screw through the rings and fix it with the adjusting knob (pictures 19-23).
- 11. The rope can be fixed into place by hand or with the help of a pipe wrench (pictures 24-27).












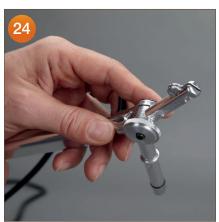











- 12. Once the rope is back in place, you can insert the lever into the corresponding holder on the lamp base. This may require some effort. If possible, carry out this step with the help of another person (pictures 28-29).
- 13. As final step, the retaining screws of the Tolomeo joint must be firmly locked. Please do not forget to place the washers according to the pictures shown (pictures 30-34).

